LED Parking Garage Specification BBYR-PG230 Series



II. Features:


I . Application :


Parking garage, warehouse, parking buildings, stair way, interior canopies.

1. High performance, up to 130lm/W;

- 2. Super wide 160DEG beam angle, High transmittance optic PC lens;
- 3. Hanging type internal wiring, anti-slip design back cover, easy installation and high safety;
- 4. IP66 rated, suitable for wet locations; 5. 3-in-1 dimming, 1-10V, PWM, Resister;
- 6. Occupancy sensor available;
- 7. Operating temperature rating of -40° F to 122 $^{\circ}$ F (-40 $^{\circ}$ C to 50 $^{\circ}$ C)
- 8. White/Bronze housing powder coat finish, 5 years warranty

III. Product Size:

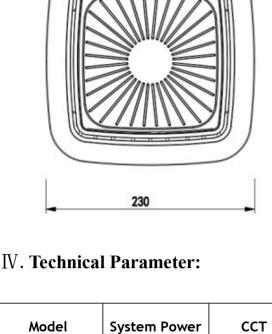

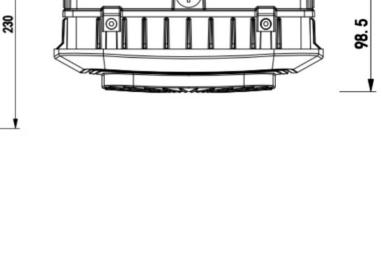

Size (MM)

Certificate


YB-PG230	0-W30	30W	3000-5700	K ≥70	>130LM/W	230*230*98.5	ETL,DLC,CE,ROHS			
YB-PG230	D-W50	50W	3000-5700	K ≥70	>130LM/W	230*230*98.5	ETL,DLC,CE,ROHS			
Input Voltage: AC100~ 277V/305V AC180~ 528V IP66 IK08 LED Chips: 30W 84pcs 2835 50W 140pcs 2835										
Storage temperature: - 40 ~ + 65°C										
√. Beam Angle:										
	TY	PE V	160°							


CRI


Luminous Flux

1.

2.

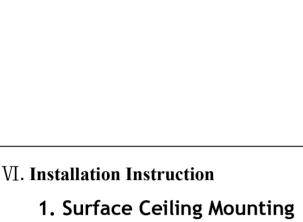

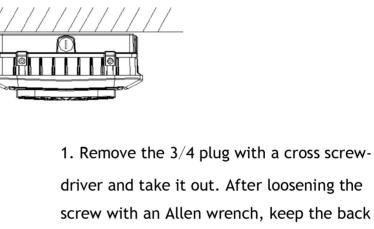

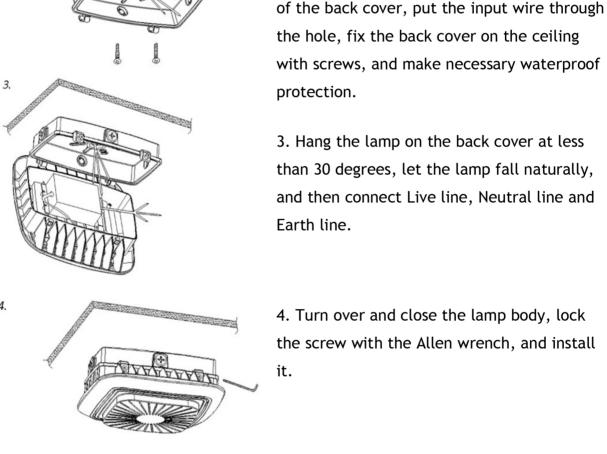

the hole, fix the back cover on the ceiling with screws, and make necessary waterproof protection. 3. Hang the lamp on the back cover at less than 30 degrees, let the lamp fall naturally,

knock out the corresponding installation holes

cover opened (the angle is less than 30 $^{\circ}$) and

2. Cut off the power supply, use tools to


take it out after turning over.


-3/4*pipe

2.

2. Pendant Mounting

1.

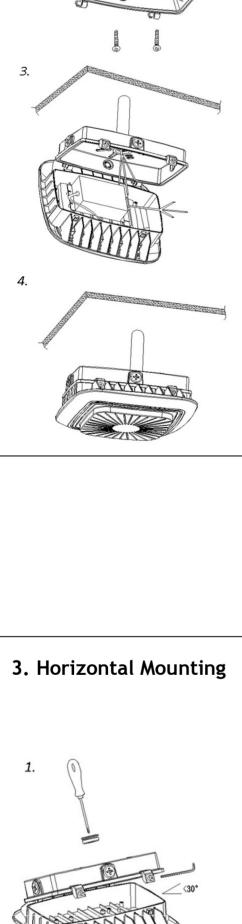

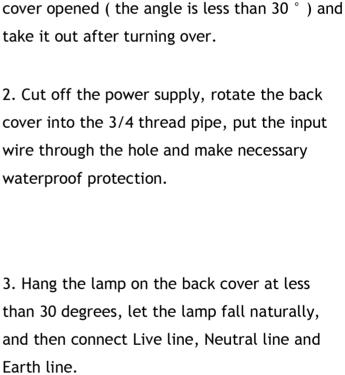

4. Turn over and close the lamp body, lock

the screw with the Allen wrench, and install

it.

1. Remove the 3/4 plug with a cross screw-

driver and take it out. After loosening the

screw with an Allen wrench, keep the back

1. Remove the 3/4 plug with a cross screw-


2. Cut off the power supply, rotate the back


cover into the 3/4 thread pipe, put the input

wire through the hole and make necessary

take it out after turning over.

driver and take it out. After loosening the screw with an Allen wrench, keep the back cover opened (the angle is less than 30 $^{\circ}$) and 2.

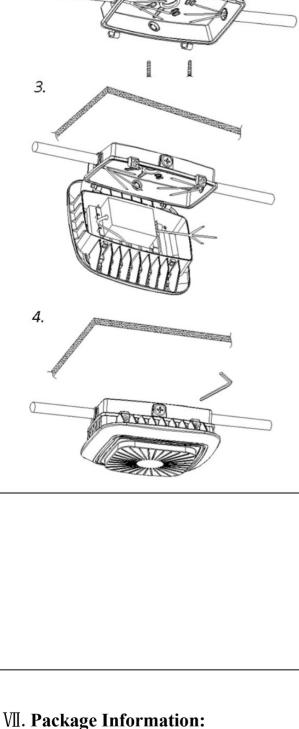

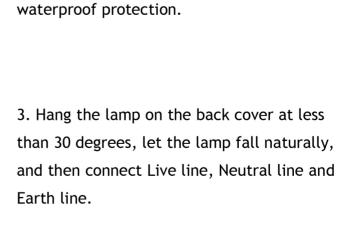

4. Turn over and close the lamp body, lock

the screw with the Allen wrench, and install



Outer carton (MM)

560*265*280

560*265*280

G.W.

10.5kg/23.1lbs

10.9kg/24.0lbs

Item Inner box (MM) YB-PG230-W30 255*135*260

255*135*260

YB-PG230-W50

1.

2.

power.

G.W.

2.4kg/5.3lbs

2.5kg/5.5lbs

it.

VII. Installation and maintenance:

- Please cut off the power supply before maintenance; Clean the lens surface regularly to maintain high light transmittance;
- 3. Clean the dust on the radiator regularly to keep high heat dissipation;
- 4. Not to clean it with water or corrosive solution, preferably wipe with dry cloth; 5. When installing or replacing the power supply, directly open the back cover with
- a screwdriver, and replace it with a new one; 6. Please make sure the input voltage matches the lamp before connecting to the